


Floor / Site Plans / Landscaping Plan
scale 1:100

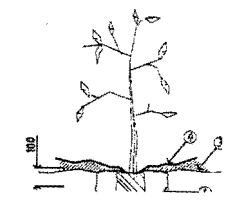

- 1 - Excavate hole not less than 75 mm wider than plant container. Back fill with topsoil, and additives & consolidate around root ball
- 2 - Excavate to depth of 300mm & replace excavated material with top soil mix.
- 3 - Cultivate to a min. depth of 100mm & add mix additives as required
- 4 - Spread mulch to 100 mm depth.

Drain Slope
Sight Int
Disturbance
Direction flow
Street
Rail & gutter filled gravel
50mm & allow ov